

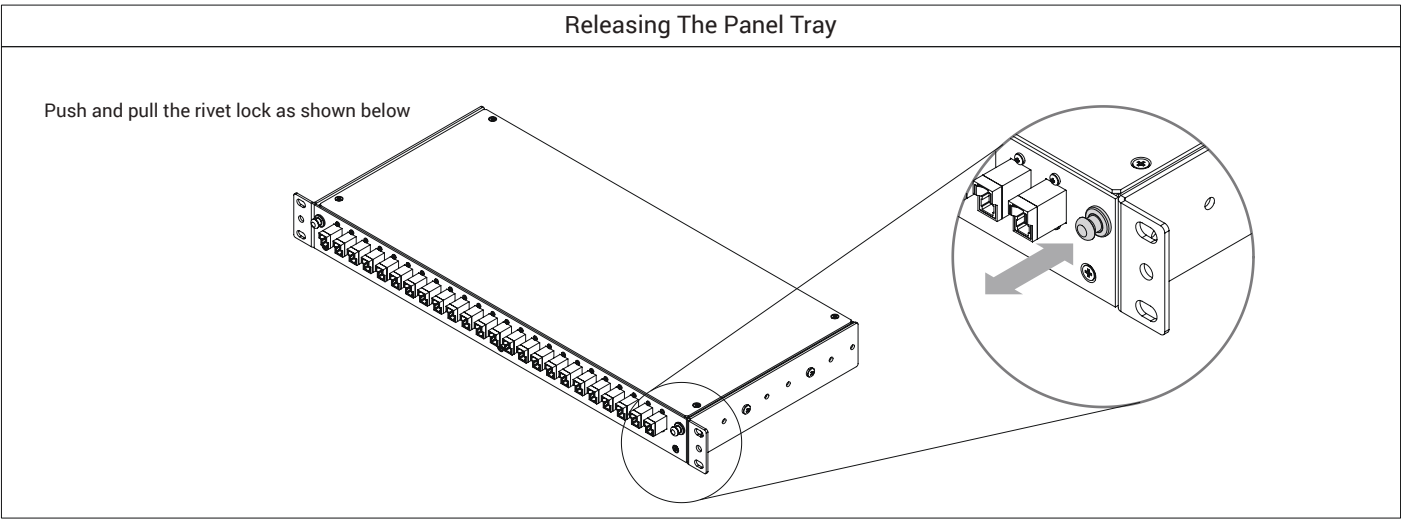


ATP Series Termination Panel Installation

User Guide

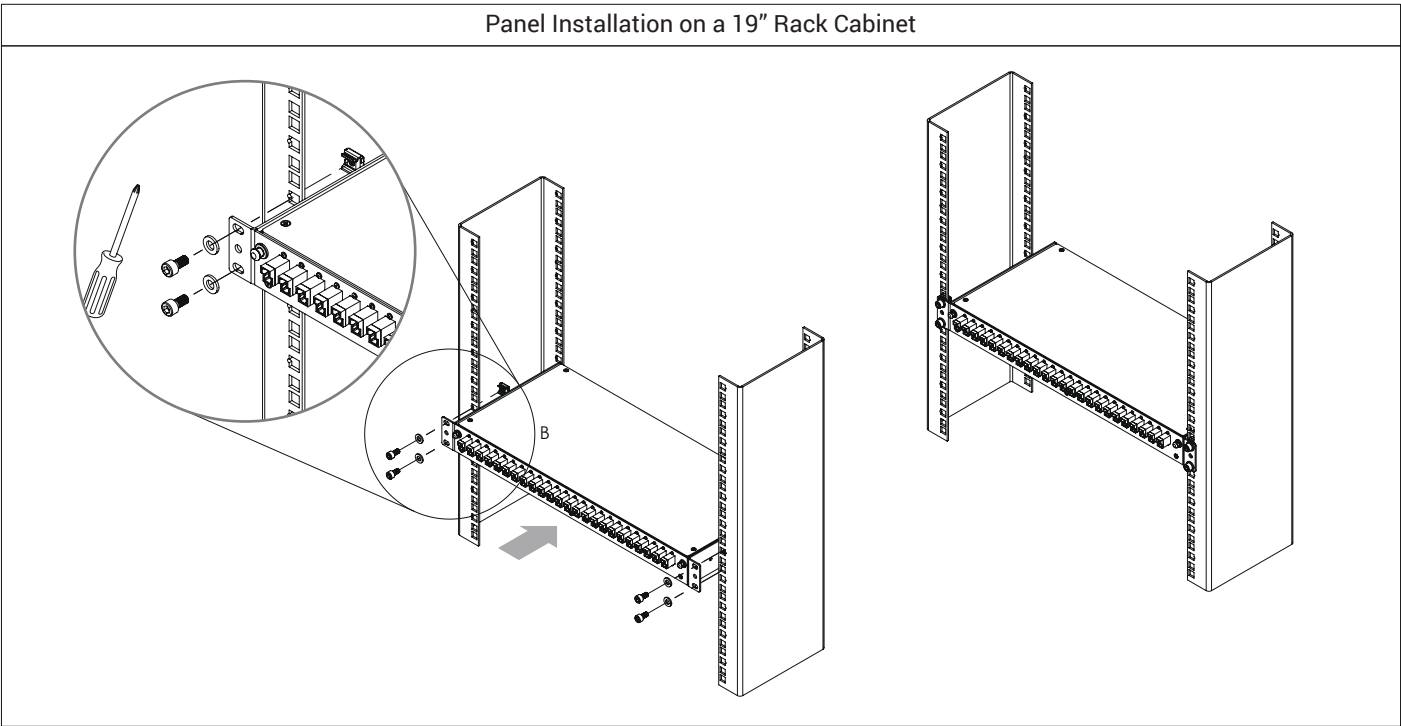


Call Center +90 444 1 726

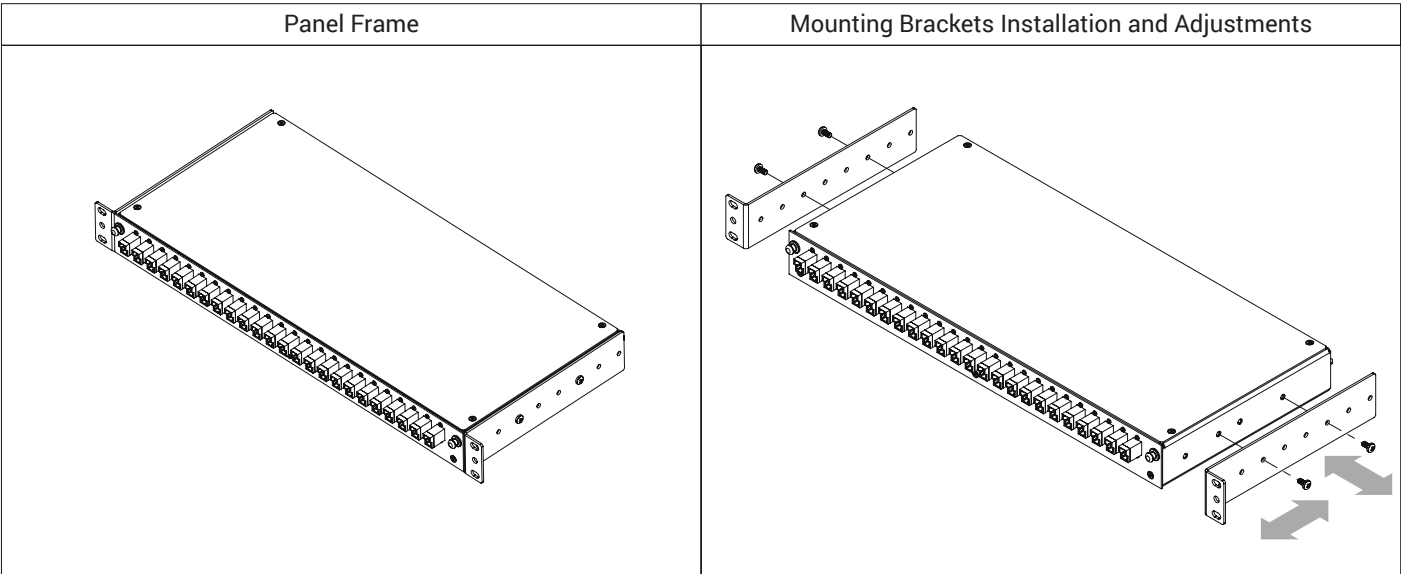


MOVING OUT THE TRAY


A Bend the tray upwards

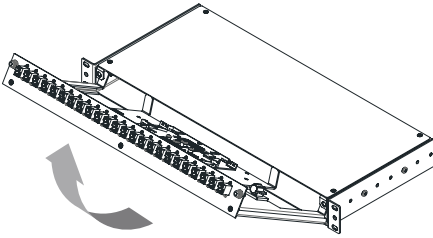

B Pull the tray to the front

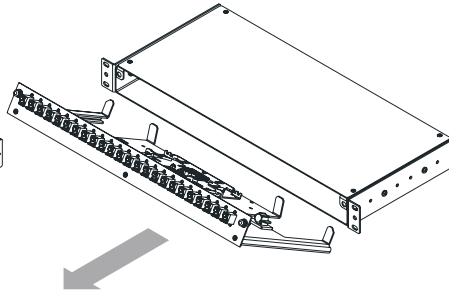


C Tray is Free

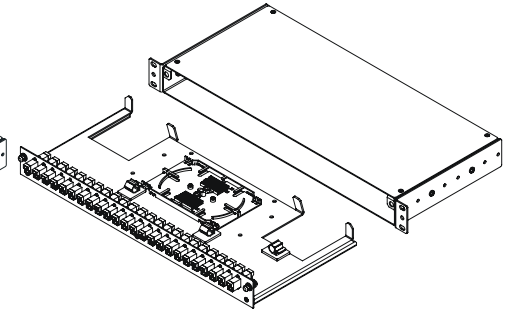


Preparation for Splicing on The Panel


1 Strip the outer jacket for 1 or 2 loops

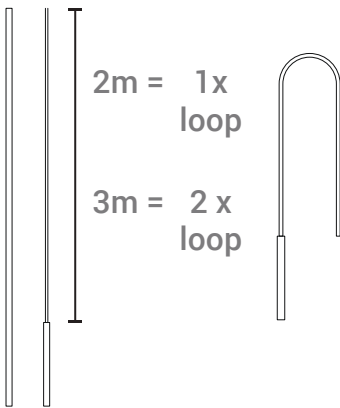


2 Insert the stripped cable

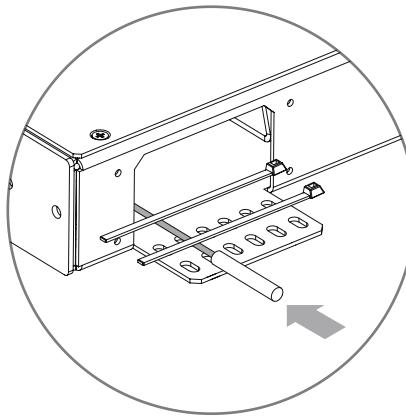


2 Fix the cable using cable ties

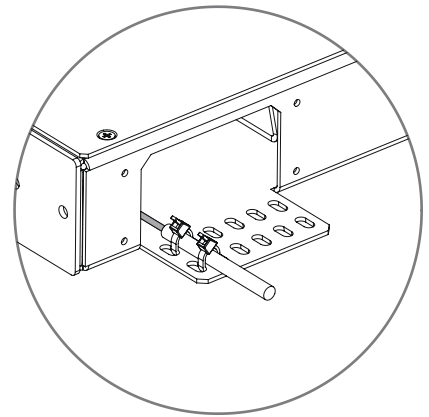


4 Organize 1 or 2 loops for tube buffering

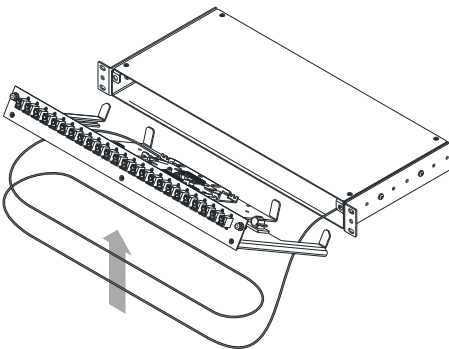


5 Organize the tube under the tray

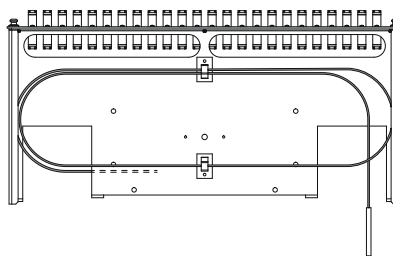


6 Insert back the tray

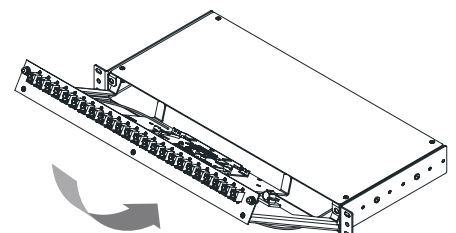

7 Panel is ready for splicing

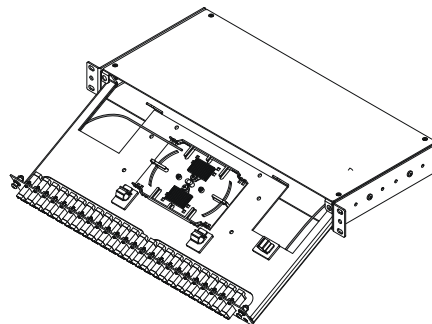

FIBER ROUTING FOR MECHANICAL SPLICES

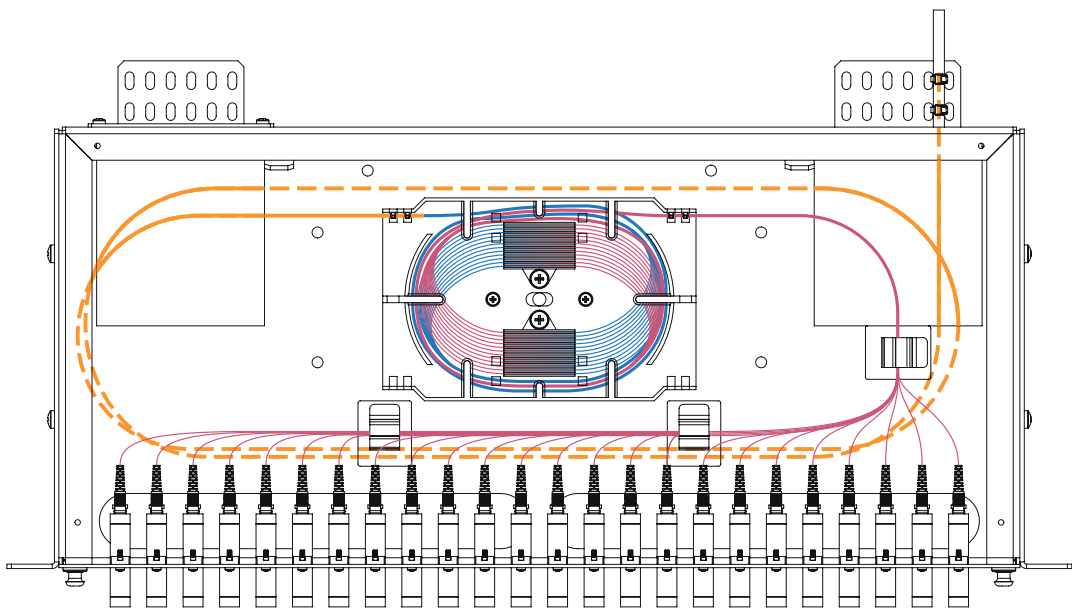

FIBER ROUTING FOR HEAT SHRINK SPLICES

